




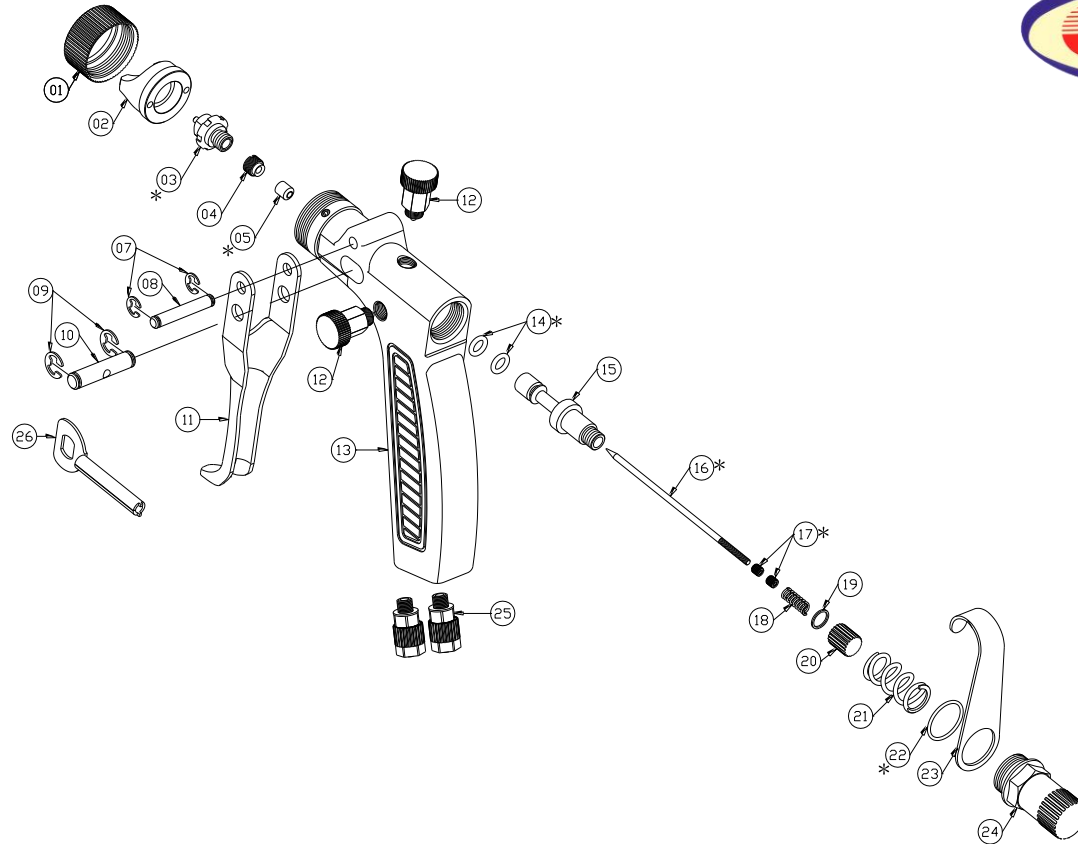

簡易扳手使用方法

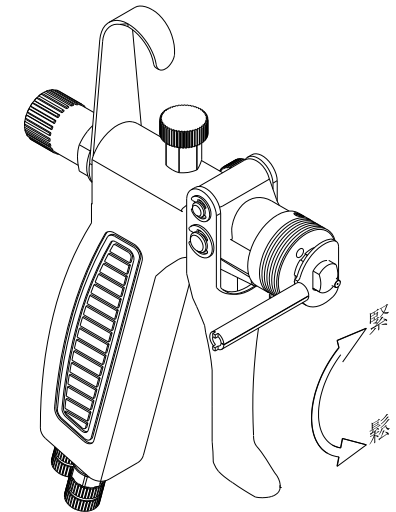

使用簡易扳手組裝或
拆卸噴嘴

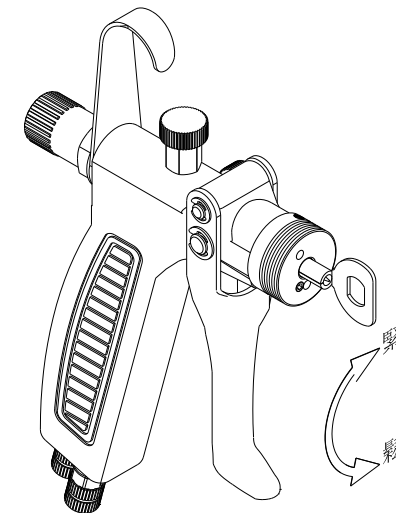

使用簡易扳手調整
撞針迫緊的鬆緊

No.	Part No.	品名	Q'ty	No.	Part No.	品名	Q'ty	No.	Part No.	品名	Q'ty
01	Mini88-001	霧化帽固定環	1	11	Mini88-011	板機	1	21	GP000097	彈簧	1
02	Mini88-037	霧化帽	1	12	Mini88-017	霧化調整鈕	2	* 22	O-13x1N	O型環	1
* 03	Mini88-032	噴嘴, 0.2mm	1	13	Mini88-028	槍體	1	23	Mini88-023	掛勾	1
	Mini66III-003-03	噴嘴, 0.3mm		* 14	O-4.5x1.5V	O型環	2	24	Mini88-024	塗料調整鈕	1
	Mini66III-003-05	噴嘴, 0.5mm		15	Mini88-016	閥棒	1	25	Mini88-025	軟管接頭	2
	Mini66-033	噴嘴, 0.8mm		* 16	Mini88-030	撞針, 0.2mm	1	26	GP000166	簡易扳手	1
	Mini66-034	噴嘴, 1.0mm			Mini66III-009-01	撞針, 0.3/0.5mm		*	GP000277	Mini88-02修理包	
04	Mini88-004	螺絲	1		Mini66-043	撞針, 0.8mm			GP000278	Mini88-03修理包	
* 05	Mini88-005	撞針迫緊	1		Mini66-044	撞針, 1.0mm			GP000279	Mini88-05修理包	
07	Mini88-007	小E型扣	2	* 17	Mini88-018	螺母	2		GP000280	Mini88-08修理包	
08	Mini88-008	軸桿	1	18	Mini88-019	彈簧	1		GP000281	Mini88-10修理包	
09	Mini88-009	大E型扣	2	19	Mini88-027	墊片	1				
10	Mini88-010	開槍軸桿	1	20	Mini88-020	螺帽	1				